SL/MTEC Athena 2.0

General Purpose Robot Platform

Model: N5M42-R2TPL

User Manual

- Small- to medium-sized robot development
- Highly adaptable and scalable
- Powerful optional functions

Learn more >



Shanghai Slamtec Co., Ltd.

Table of Contents

1. PRODUCT OVERVIEW	3
1.1 INTRODUCTION	3
1.2 Basic Functions	3
1.3 Exterior	4
1.4 Charging Dock	5
1.5 Product List	5
2.PRODUCT PARAMETERS	6
3. INSTRUCTIONS OF HARDWARE	9
3.1 Wire Instructions	9
3.2 Important Interfaces of Developing Board on RK3399	12
3.3 Reference of Hardware Design	12
4. REFERENCE OF STRUCTURE DESIGN	23
4.1 Installing Interface of Host Computer	23
4.2 Instruction of Load Limit	23
4.3 Radar Clearance Area	
4.4 DEEP CAMERA CLEARANCE AREA	
5. SETUP INSTRUCTIONS	
5.1 Opening	26
5.2 Placing Charging Base	
5.3 Power ON/OFF	27
5.4 Charging	27
5.5 Emergency stop & brake and reset	27
5.6. Connection to Computer	
5.7 Map Building and Upload	
5.8 Host Computer Completes Startup and Loading The Map	33
6. ADJUSTING TOOLS	35
6.1 RoboStudio	35
6.2 Web Management Backstage	35

<u>SL</u>\MTEC

7. DEVELOPER TOOLS	
7.1 Start Using	
7.2 Inter-system Adjusting Framework	
7.3 Instructions of Each System	
7.4 Demonstrations of Code	
7.5 Details Of Robot API	
8. INTRODUCTION AND USE OF ELEVATOR CONTROL	41
8.1 INTRODUCTION	41
8.2 Features	41
9. SPECIAL NOTE	
9.1 Charge point deployment	43
9.2 Restricted usage scenarios	43
9.3 Faults that cannot be handled temporarily	44
9.4 Notes	44
10. MAINTENANCE	
11. COMMON FAULTS AND TROUBLESHOOTING	47
12. CERTIFICATE	47

1. Product Overview

1.1 Introduction

Developed by Slamtec, Athena 2.0 is a scalable and low-cost robot platform capable of meeting the needs of small-sized robot application development in areas such as smart patrol robots, container transportation robots, food delivery robots, and more.

The built-in SLAMCUBE 2 autonomous localization and navigation system enables pathfinding and localization and navigation features, making Athena 2.0 capable of performing a variety of tasks across different commercial environments.

Cross-floor Moving, Light Deployment

Athena 2.0 is equipped with the latest version of Slamtec Smart Elevator Control 4.0, which allows it to adapt to different brands of elevators.

Through the latest version of Slamtec RoboStudio 2.0, Athena 2.0 supports integration of maps of multiple floors in one click. This improves the mapping efficiency and streamlines the deployment, thus enabling light deployment and fast use.

Multi-Sensor Data Fusion

Athena 2.0 uses multi-sensor data fusion technology. Fitted with equipment such as lidar, magnetic sensors, depth cameras, and bumper sensors, Athena 2.0 can implement autonomous mapping, localization, and navigation by flexibly responding to complex and ever-changing operational environments.

1.2 Basic Functions

1.2.1 Compact and Flexible

Athena 2.0 can move flexibly in a small size, thus meeting the needs of flexible moving and deployment-free scenarios. Thanks to its high obstacle passing stability, Athena 2.0 can easily pass narrow aisles and ramps.

1.2.2 Cross-floor Delivery and Light Deployment

Athena 2.0 is equipped with the latest version of Slamtec Smart Elevator Control 4.0, which allows it to adapt to different brands of elevators. When combined with RoboStudio 2.0, it can effectively enable light deployment and fast use.

Smart Elevator Control 4.0 addresses the challenges of bad weather, as well as unstable air pressure and communication in high-rise buildings. It provides accurate detection of elevator statuses along with call-control functionality. For hotel/restaurant delivery robots, it provides efficient and reliable solutions that help them autonomously navigate elevators in cross-floor scenarios.

1.2.3 Autonomous Mapping, Localization and Navigation

Athena 2.0 is built with the latest version of Slamtec SLAMCUBE 2 autonomous localization and navigation system which is more stable and can accommodate more interfaces. The

structural design integrated three boxes into one, saving more space for chassis layout. With the path-finding, autonomous mapping and localization and navigation features, it helps robots figure out where they are, where they should go, and the best way to get there. It enables the robots to automatically find paths, locate, and move as needed without human assistance. In addition, Athena 2.0 supports multi-route patrol mode.

1.2.4 Rich Port Options and High Scalability

Athena 2.0 owns a completely open hardware and software platform and supports extended hardware. The rich port options eliminate the restrictions in development platform and programming language, which makes Athena 2.0 universal for all types of host computer and support development of business logic applications through SLAMWARE SDK.

1.2.5 360° Protection and Smart Obstacle Avoidance

Athena 2.0 is fitted with equipment such as lidar, magnetic sensors, depth cameras, and bumper sensors, and adopts the multi-sensor fusion technology. It provides rapid and accurate identification of surrounding active environments, enabling smart obstacle avoidance and greatly reducing the chances of safety incidents. It also has fall-resistant and collision-resistant protection and emergency stop features, making the food delivery process fully protected, secure, and reliable.

1.2.6 Autonomous Recharging

The autonomous recharging feature ensures that Athena 2.0 will have enough power to complete the assigned tasks. Athena 2.0 will return automatically to its charging station when its remaining power falls below the set limits.

Special note: the automatic recharge function cannot be triggered only under the condition of that combined with upper machine with delivery and disinfection plug-in or customized models.


1.2.7 Multi-robot Scheduling & Collaboration

In scenarios such as large hotels, office buildings, and malls, multiple robots will avoid each other according to the task priority when they meet. The collaboration of multiple robots can further improve the delivery and guide efficiency.


Athena 2.0 supports local area network (LAN) and cloud platform collaborative operations, along with the dynamic adjustment of both speed and delivery routes in accordance with the environment to realize efficient, safe, and reliable multi-point delivery.

1.3 Exterior

<u>SL</u>\MTEC

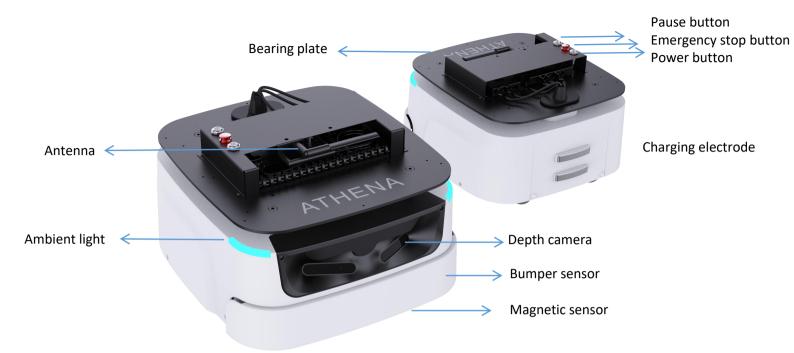

1.4 Charging Dock

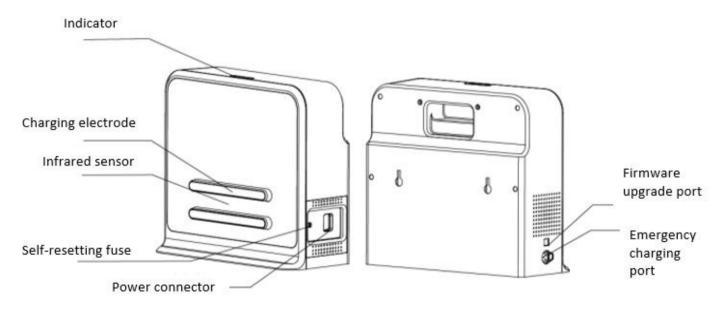

Charging dock diagram

1.5 Product List

Name	Quantity	Notes
Athena 2.0 body	1	Athena 2.0 chassis body
Charging dock	1	Select environment for deployment
Charging dock		before use.

2.Product Parameters

Name		Athena 2.0 chassis		
Core feature		SLAMCUBE 2 localization and navigation		
		Length x width	460*428 mm, rotation diameter 551 mm	
		Height	232mm (excludes controller)	
		Weight	22 kg	
Mass and	volume	Rated load	40 kg	
		Max load (parallel cement pavement)	60kg	
	Lidar sensor	Max scan radius (90% surface reflective rate)	30 m (TOF S2 radar)	
		Quantity	1 for standard configuration (2 can be customized)	
Sensor	Depth camera sensor	Detection range	0.3–3.5 m(changed by the condition of illumination)	
performance		Field of View (FOV)	H:75±3°; V:51±3°	
parameters	Physical	Quantity	2 units	
	magnetic sensor	Max detection range	3.5 cm	
Bumper		Quantity	2 units	
	bumper	Trigger method	Physical collision	
Mapping performance		Map resolution	5 cm	
		Max mapping area	500m×500m	
		Max move speed	1.0 m/s (1.2 m/s can be customized)	
Motion parameters		Max cross slope	10° Ramp: Max slope angle of chassis: 10°; Slope =18%*Ramp; The height of the full-machine mass center is within 18 cm, and the safety ramp within 10°. (A 100% slope means a 45° ramp, whose height difference for 100 m is 100 m.)	
		Passing obstacle height	2 cm	
		Passing obstacle width	4 cm	
		Min pass range	55 cm	
Мо	tor	Wheelset	2x 6.5-inch in-wheel motor 4x 2.5-inch omni-directional	

<u>SL</u>\MTEC

			wheel	
		Ethernet	1x RJ45 Gigabit Ethernet port	
		Device commontes	DC 24V 9.5A	
		Power connector	DC 12V 2A	
		Wi-Fi	2.4 GHz	
		HDMI	1x HDMI	
	Hardware port		1x 3.5mm headset socket	
			1x LINE_MIC audio jack (Co-lay	
User port		Audio	with headset socket)	
			1x Dual-channel 5w/8Ω amplifier	
			jack	
		Type-C	Standard USB 3.0 Type-C port	
			HTTP API, supports different	
	Cofficience A DI		development languages and	
	Software API	SLAMWARE™	platforms, such as Windows, iOS,	
			Android, and Linux	
	·	Conseiturenseifisetiene	18 AH (standard)	
		Capacity specifications	Battery scalable to 90 AH	
		No-load operating	19h (no load)	
Battonyar	nd capacity	time	1911 (110 10ad)	
Dattery ar	ια ταμάτιτγ	Full- load operating	8h(full load)	
		time		
		Charging time	3-4 h (standard charging station)	
		Battery life	500 charges	
		Power dissipation in	17W (no load)	
		standby time	1777 (110 1000)	
		Full-load rated power		
		consumption	40W (moving)	
Power co	nsumption	(full load weight: 40kg)		
		Max power		
		consumption with	228W	
		external load		
		Rated output	25.2V 2A	
Noise		Operating noise	≤ 60 db	
Operating environment		Operating	0°C–40°C	
		temperature		
		Transport and storage	-25 ℃ to +55℃	
		temperature		
		Operating humidity	30%–70%RH (No condensation)	
		Applicable altitude	≤ 2000 m	

Charging station		
Size	360 mm*150 mm*320 mm (W*D*H)	
Color	White	
Rated input	100-240V 50/60 Hz 3A Max	
Rated output	DC 25.5V 6A	

3. Instructions Of Hardware

3.1 Wire Instructions


Interfaces	Picture	Index	Function	Note
Power ON/OFF			Power switch of the entire system. Short press until the indicator light turns on power-on, long press until the indicator light turns off power-off.	
Shut Down	LANBOOT 急停		Effectively control Athena2.0 in an emergency. After pressing, Athena2.0 will immediately shut down.	It is a switch that must be designed according to rigid regulations. If the switch is not designed, Athena2.0 will refuse to run.
Brake			When robot is energized, press this switch to release the brake and you can push the robot freely; press it once again to brake, and the robot will not be able to push it freely.	Invalid if the robot is not turned on
24V Power		Rated Voltage 24V Maximum current 9.5A	Maximum output power is 200W, can be used to supply power to external devices	No overload
12V RK3399 Power Supply Wire	BBEE-AZ	Rated Voltage 12V Maximum Current 20A	Cube2 supplies power to the RK3399 development board.	




Depth Camera Interface	HEWER DE LE COLOR	USB3.0	Connected to the RK3399 development via USB3.0 to obtain information.	Need to pay attention to the left and right sequence.
Docking Camera		USB2.0	Connected to the RK3399 development via USB3.0 to obtain information of code scanning camera.	Assist precise docking.
12V -DISP	designment	Rated Voltage 12V (See the figure below for the design drawings)	12V working power of Cube2 to provide the external display screen of human-computer interaction.	Maximum current 2A
USB-Type-C	Bit of Bit	USB3.0	Used for communication between 3399 and Cube2.	Connect to Hub3.0

Design drawing of 12V -DISP terminal



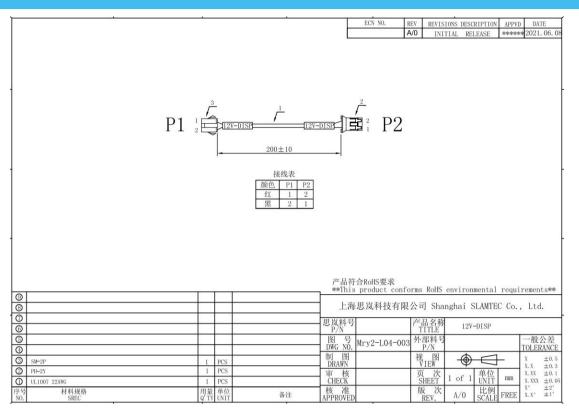

3.2 Important Interfaces of Developing Board on RK3399

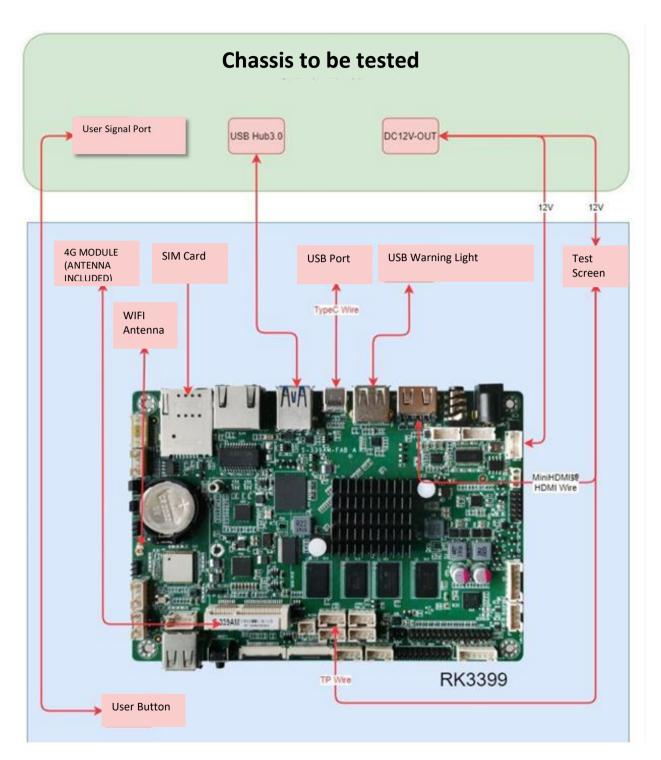

3.3 Reference of Hardware Design

Notice:

(1) Before starting, please read the manual carefully to avoid product damage caused by misoperation;

(2)The working temperature of the main board is 0 $^{\circ}$ C to +40 $^{\circ}$ C, 30%-70%RH, in order not to damage the product due to excessive cold/heat or moisture;

(3) Do not make strong mechanical movement of this product, and operate this product before static protection is done;

(4) Please turn off the power before installing any external cards or modules;

(5) Please ensure the external power supply is DC 12V to avoid damage to the main board;

3.3.1 Product Description

RK3399 Android system main board adopts Rockchip RK3399 main control solution. The specification of the main board is a standard 3.5-inch structure with a size of 146*102mm.

The main board processing core RK3399 is based on the dual Cortex-A72+four Cortex-A53 core CPU structure. It uses the powerful Mali-T864 GPU graphics display core, supports VP9, H.265/H264 hardware decoding, and 4K ultra high-definition output.

Onboard 4GB DDR3 memory and 32GB storage.

The display interfaces are: 1*HDMI, supporting dual-screen display, which can meet the needs of flexible and diverse point-screen applications.

The board has a 3.5mm headset socket and a dual-channel 5W power amplifier speaker interface, which can meet the needs of audio applications.

The main board integrates a gigabit network port, and also integrates a WIFI/Bluetooth module to support various network access methods.

The onboard Mini-PCIe expansion slot supports 4G network card module expansion.

The main board has 5 USB ports and 1 Type-C slot, 2 serial slots, and 1 set of 8 GPIO pins. In addition, the main board has a rich function expansion pin interface.

The main board uses a single 12V DC adapter for power supply.

Characteristics of Main Board:


★Based on Rockchip RK3399 ARM processor solution;

★Display interfaces: eDP and HDMI;

★Hardware decoding H.265 high-definition video, support 4K ultra high-definition output;

★Rich functions, onboard 5*USB/2*COM/8*GPIO/1*IR infrared;

<u>SL</u>\MTEC

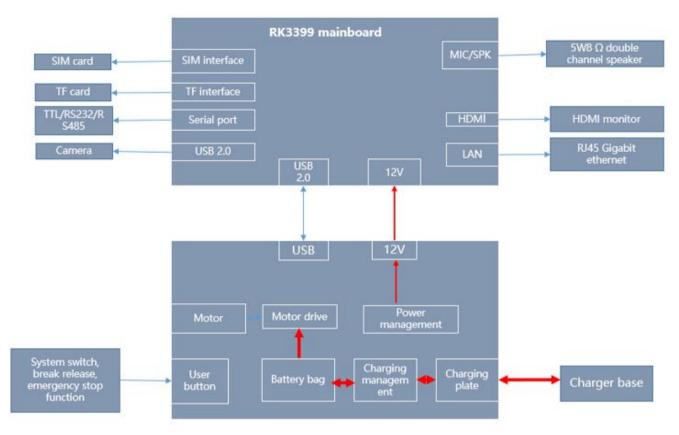

6-1 RK3399 Main board basic application diagram

3.3.2 Product specifications

(1) Hardware Specification Sheet

Processor	Rockchip RK3399 ①
RAM	4GB DDR3
Display	1*eDP 1*HDMI output supports 480p/480i/576p/576i/720p/1080p/1080i/4k
Internet	1*RJ45 Gigabit Ethernet 1*WIFI+Bluetooth ③
Audio	1*3.5mm headset socket 1*LINE_MIC audio pin (with headset socket Co-lay) 1*Dual-channel 5w/8Ω power amplifier speaker pin
Storage	32GB eMMC
СОМ	2* serial port ④
Others	4*USB2.0、1*USB3.0、1*USB3.0 Type-C OTG; 1* standard Mini-PCIE slot, for 4G module 1*TF card extension ⑤ 8 GPIO pin 1*IR infrared extension pin 1*I2C touch screen extension pin 2 A/D conversion pin



	2*MIPI-CSI2 camera expansion port 1*G-Sensor gravity sensor
Power connector	DC2.5*5.5 socket/PH2.0-4pin,12V DC input
Main board specifications	146*102*22mm, green
Operating system	Android 7.1
Working environment	Temperature: 0∼+40℃ Humidity: 30~70%RH


Remark:

(1) RK3399 is dual-core Cortex-A72 (the highest frequency is 1.8GHz) + 4-core Cortex-A53 (the highest frequency is 1.4GHz);

2) WIFI specifications: 802.1b/n/g @ 2.4GHz; Bluetooth specifications: Bluetooth 4.0;

③COM1 is the Debug interface and supports TTL/RS232, COM2 can communicate with the onboard MCU, and can also be used as an external RS232/RS485 interface;


(4) TF card supports maximum expansion to 128GB.

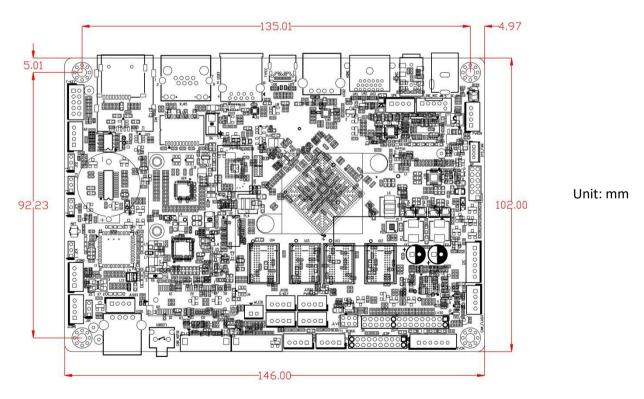

(2) Size of main board

3.3.3 Introduction of Interfaces


(1) Front view of main board

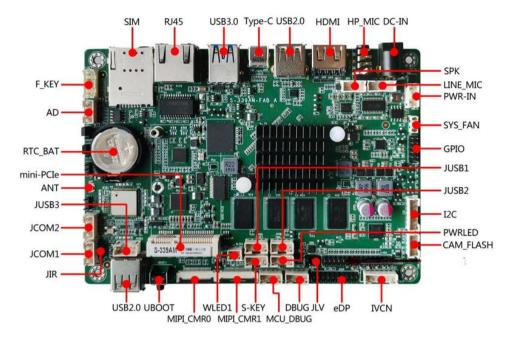


(2) Front IO diagram of the main board



(3) IO diagram behind the main board

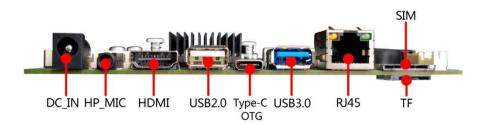

(4) Back view of main board

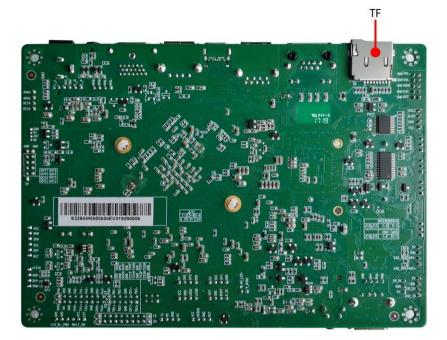


Caution : The identification method of the first pin on the main board is: 1 has a white and bold silkscreen; 2 the pins seen on the back of the main board are square holes.





3.3.4 Definition of pin function

(1) Pin Interface Distribution

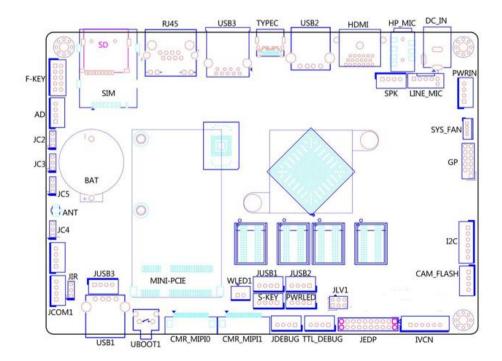



(2) Description of silkscreens

Silkscreen	Description
DC_IN	+12V DC input interface (φ2.5mm base)
PWRIN	PH2.0-4PIN power input terminal
LINE_MIC	PH2.0-5P LINE-OUT&MIC-IN audio extension socket
UBOOT1	Uboot flash mode button[1]
SPK1	4-PIN PH2.0 amplifier speaker pin $(5W/8\Omega)$
HP_MIC	3.5mm headset socket
HDMI	Standard HDMI HD digital display interface
TYPEC	Standard USB3.0 Type-C interface[2]
USB1	Standard USB3.0 Type-A single layer interface
USB2	Standard USB2.0 Type-A single layer interface
USB3	Standard USB3.0 Type-A single layer interface
RJ45	Gigabit RJ45 network interface
SIM	SIM card slot
SD	TF expanded card slot
JCOM1	PH2.0-4PIN COM1 RS232 mode pin
TTL_DBUG	PH2.0-4PIN COM1 TTL battery mode pin (DEBUG serial port)
JCOM2	4PIN-PH2.0 RS232/485 serial port 2 sockets
DEBUG	PH2.0-4PIN onboard MCU module debugging interface
JC2	COM1 RS232/TTL mode setting jumper [3]
JC3	COM1 RS232/TTL mode setting jumper [3]
JC4	COM2 internal onboard MCU/external JCOM2 setting jumper [4]
JC5	COM2 internal onboard MCU/external JCOM2 setting jumper [4]
JIR	DuPont 2.0-3pin infrared receiver extension pin
ANT	WIFI/Bluetooth IPEX antenna interface
BAT	RTC clock 3.3V battery plug
CAM_FLASH	Camera flashlight interface
F-KEY	Function key pin [5]
MINI-PCIE	Mini-PCIe module slot
CMR_MIPIO	MIPI-CSI2 camera interface 1
CMR_MIPI1	MIPI-CSI2 camera interface 2
WLED1	mini-PCIe expansion module signal light
JUSB1	4PIN-PH2.0 USB2.0 extension pin 1
JUSB2	4PIN-PH2.0 USB2.0 extension pin 2
JUSB3	4PIN-PH2.0 USB2.0 extension pin 3(and USB1 Co-lay)
S-KEY	4PIN-PH2.0 system power on/off, reset pin
PWRLED	Power indicator pin [6]
JEDP	eDP HD digital display interface [7]
AD	2 way A/D conversion pin
12C	I2C pin

<u>SL</u>\MTEC

GP	10PIN-5.08mm 8 reserved programmable control input and output
	plug-in terminals
SYS_FAN	System cooling fan power supply pin

Remark:

[1] After the main board is powered on, press and hold the Uboot button to enter Uboot mode to upgrade the system;

[2] Type-C interface only supports Slave mode, connect to computer for firmware upgrade;

[3] JC2 and JC3 jointly determine the COM1 signal connection:

Mode	RS232 (JCOM3 pin)	TTL (TTL_DEBUG pin)
JC2&JC3	1-2P short interface	2-3 short interface

[4] JC4 and JC5 jointly determine the COM2 signal connection:

Mode	RS232 (JCOM2 pin)	MCU (485A base)
JC4&JC5	1-2P short interface	2-3 short interface

[5] The extension pin contains function key signals such as volume up, volume down, home, back, and OEM customization;

[6] Preset power indicates two-color lamp extension pin;

JP/CN	pin#	Signal	pin#	Signal	Remark
	1	MIC_IN+			
	2	MIC_IN-			
LINE_MIC	3	GND			
	4	LINEOUT_R			
	5	LINEOUT_L			
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	SPK_L-			
CDK	2	SPK_L+			
SPK	3	SPK_R-			
	4	SPK_R+			
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	12V			
PWR_IN	2	12V			
FVVR_IIN	3	GND			
	4	GND			
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	GND			
	2	+5V			
SYS_FAN	3	FAN_INT			
	4	NC			
JP/CN	pin#	Signal	pin#	Signal	Remark

(3) Definition of Interface pin and jumper selection

	1	+5V			
JIR	2	GND			
	3	IR			
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	PWR_ON			
S-KEY	2	GND			
J-NET	3	RSET			
	4	GND			
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	VOL+	2	GND	
	3	VOL-	4	GND	co-lay 1st PIN and
F-KEY	5	HOME_KEY	6	GND	upgrade button co-
	7	BACK_KEY	8	GND	lay
	9	OEM_KEY	10	GND	
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	+3.3V			
PWRLED	2	GND			
	3	LED_A			
	4	LED_B			

Main board and jumper definition (continued 1)

JP/CN	pin#	Signal	pin#	Signal	Remark
	1	RS232_TX			
JCOM1	2	RS232_RX			
JCOINT	3	GND			
	4	+5V			
JP/CN	pin#	oin# Signal pin# Signal		Signal	Remark
	1	RS232_TX/ <mark>485+</mark>			
JCOM2	2	RS232_RX/ <mark>485</mark> -			
JCOIVIZ	3	GND			
	4	+5V			
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	5V (NC)	2		
	3	GPIO1	4	GPIO2	
GP	5	GPIO3	6	GPIO4	
	7	GPIO5	8	GPIO6	
	9	GPIO7	10	GPIO8	
	11	GND	12	GND	
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	+3.3V			
	2	GND			
12C	3	TP_SDA			
120	4	TP_SCL			
	5	TP_INT			
	6	TP_RSET			
JP/CN	pin#	Signal	pin#	Signal	Remark
JUSB1	1	+5V			
JUSB2	2	DT-			
JUSB3	3	DT+			

Λ	GND		
4	UND		1

JP/CN	pin#	Signal	pin#	Signal	Remark
	1	+12V			
	2	+12V			
IVCN	3	BKLT_ON			
IVCIN	4	BKLT_PWM			
	5	GND			
	6	GND			
JP/CN	pin#	Signal	pin#	Signal	Remark
JP/CN	pin#	Signal	pin#	Signal	Remark
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	VCC	2	VCC	
	3	HPD	4	GND	
	5	EDP_AUX+	6	EDP_AUX-	
	7	GND	8	GND	
JEDP	9	EDP_TX0+	10	EDP_TX1+	
JEDP	11	EDP_TX0-	12	EDP_TX1-	
	13	GND	14	GND	
	15	EDP_TX2+	16	EDP_TX3+	
	17	EDP_TX2	18	EDP_TX3-	
	19	GND	20	GND	

Main board and jumper definition (continued 2)

Main board and jumper definition (continued 3)


JP/CN	pin#	Signal	pin#	Signal	Remark
	1	+3.3V			
AD	2	GND			
AD	3	AD1			
	4	AD2			
JP/CN	pin#	Signal	pin#	Signal	Remark
WLED	1	+3.3V			
	2	WLAN_LED-			
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	+12V			
CAM_FLASH	2	GND			
CAIVI_FLAST	3	Flash_ON			
	4	FLASH_PWM			
JP/CN	pin#	Signal	pin#	Signal	Remark
	1	AGND			
	2	+2.8V			
	3	+1.8V			
CMR_MIPIO	4	+1.5V			
CMR_MIPI1	5	GND			
	6	CMR_CLK			
	7	GND			
	8	MIPI_RX_CLK+			



9	MIPI_RX_CLK-	
10	GND	
11	MIPI_RX_D2+	
12	MIPI_RX_D2-	
13	+2.8V	
14	MIPI_RST0	
15	CIF_PDN1	
16	I2C_SDA_CAM	
17	I2C_SCL_CAM	
18	GND	
19	MIPI_RX_D3+	
20	MIPI_RX_D3-	
21	MIPI_RX_D0+	
22	MIPI_RX_D0-	
23	MIPI_RX_1+	
24	MIPI_RX_D1-	

4. Reference of Structure Design

4.1 Installing Interface of Host Computer

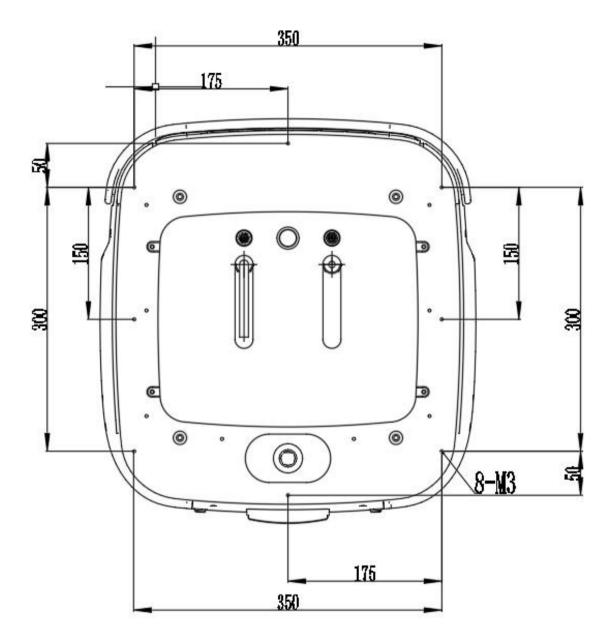


As shown in the figure above, there are a total of 8 M3 threaded holes for the installation and fixation of the host computer.

It is recommended to use M3 screws with spring washer and blue anti-loosening glue.

4.2 Instruction of Load Limit

Maxload 60KG

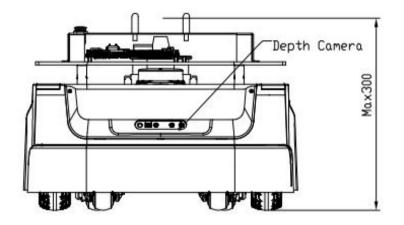

(1) Max load of host computer is 60 kg, Rated load is about 40 kg..


(2) * It is recommended that the center of gravity of the whole machine is not higher than 300mm from the ground during installation.

i. *The center of gravity of chassis is the one which Slamtec provides, the height is 82 mm;

ii. The center of gravity of the whole machine is the overall center of gravity of the chassis plus the robot;

iii. If the center of gravity of the whole machine exceeds 300mm, the slope-climbing and obstaclecrossing performance may be reduced.


4.3 Radar Clearance Area

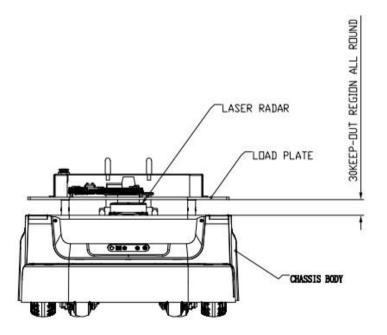

There is a radar between the chassis body and the host computer, which requires a certain clearance area to avoid being shielded or interfered;

The boundary of the host computer cannot exceed the lower boundary line of the host computer as shown in the figure.

4.4 Deep Camera Clearance Area

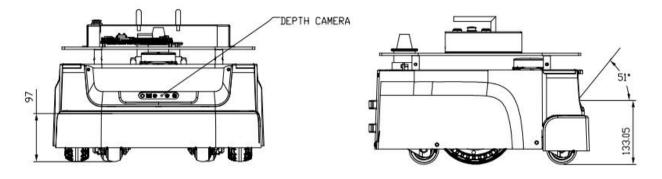


There is a deep camera on the chassis, which requires a certain clearance area to avoid being shielded or interfered;

The host computer cannot exceed the clearance area as shown in the figure. Due to the angled layout of the dual cameras, the superimposed clearance area is larger than a single FOV.

5. Setup Instructions

5.1 Opening

1. After receiving the Athena2.0 machine, please check whether the packing box is intact as shown in the left picture, and whether the box on the right side of the Athena2.0 sample of the outer box is checked. After confirming that the packing is complete and the box contains Athena2.0, use packing pliers to cut the packing tape, remove all packing straps and paper corners, it should be shown as on the right picture.

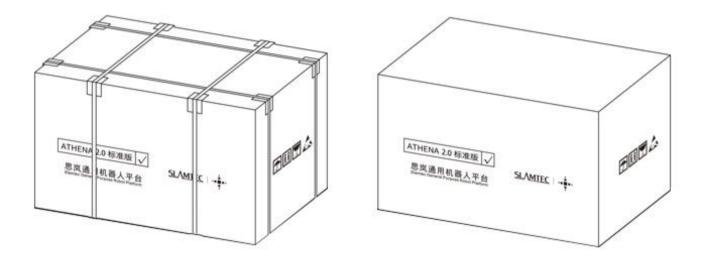



5.2 Placing Charging Base

Athena2.0 can be charged by returning to the charging base automatically, so the position of the charging base will affect the automatic return charging function of Athena2.0. When Athena2.0 returns to the charging station, it will generate propelling force. Therefore, it is best to place the charging stand with its back against the wall. The wall must meet the following conditions:

a. The charging base must be attached to the wall, without no obstacle in the middle, try to avoid the wall with skirting, etc.

b. The wall material cannot be high-permeability materials, such as mirror or glass

c. The wall width needs to be at least three times wider than the width of the charging stand

d. The wall must be a straight wall, not a curved wall

The charging base needs to be connected to a 220V power supply. The length of the external power cord of the charging base is 1.5m. Therefore, it is necessary to ensure that there is a 220 V interface within 1.5m of the wall against which the charging base rests. The ground wiring harness is messy causing unnecessary trouble).

The ground in front of the charging base must meet the following conditions:

a. Open, with no obstacles within a radius of 2m in front of the charging stand as the center of the circle

b. Plane, no slope

c. The ground cannot be covered with soft carpet that causes Athena2.0 to sink more than 2cm

To ensure that Athena2.0 automatically returns to the charging function, it is necessary to ensure that Athena2.0 always starts from the charging base.

Note: If you want to change the position of the charging stand, you need to set the corresponding setting according to the position you need when loading the map. For detailed operations, please see the SDK corresponding interface operation document.

5.3 Power ON/OFF


Power on: if the machine is not in the position of charging pile, long press the power switch until the power switch indicator lights up and release it. The machine system enters the startup process, the front light strip lights up, and the wheel hub is in the brake state, indicating that the startup is completed.

If the machine is in the position of charging pile, short press the power switch until the power switch indicator lights up and then release it. The machine system enters the startup process, the front light strip lights up, and the wheel hub is in the brake state, indicating that the startup is completed.

Power off: long press the power switch until indicator light goes out, then release it, the machine enters the shutdown process, the light strip on the front of the machine goes out, and the machine can be pushed arbitrarily, indicating that the shutdown is completed.

5.4 Charging

As shown in the figure below, align the charging piece of the machine with the charging electrode of the charging pile. After waiting for 10 seconds, the front light strip of the robot lights up, the wheel hub enters the braking state, and the breathing light of the charging pile flashes, indicating that charging has started.

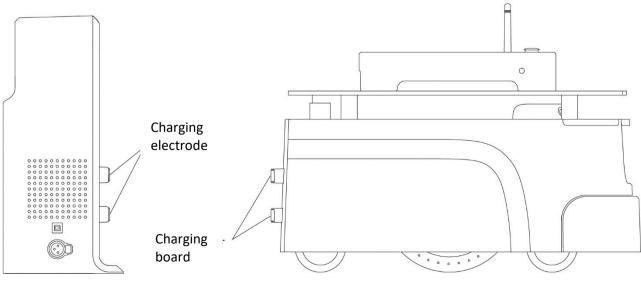

5-2 Athena2.0 charging

5.5 Emergency stop & brake and reset

(1) Emergency stop button

Press the emergency stop button, the Athena2.0 machine will stop immediately, stop and no longer respond to any motion control commands, and the manual push is blocked.

Release the "emergency stop button " and the machine can return to normal working conditions.

(2) Brake button

Press the "brake button", the Athena2.0 machine will stop immediately, stop and no longer respond to any motion control commands. The machine can be pushed manually, such as pushing it to the charging pile.

Release the "brake button", the machine can return to normal working condition, and the manual push is blocked.

5.6. Connection to Computer

[Step 1] The hotspot of the computer connected to the chassis

Athena 2.0's hotspot is auto-started by default, the hotspot format is: SLAMWARE-XXXXXX

Hot spot identification method: query the last six digits of the SSID in the chassis label.





5-3 Chassis label SSID

For example, if the label SSID: Robot-D70CED, the hot spot of this Chassis is SLAMWARE-D70CED

[Step 2] Download and install Slamtec RoboStudio from the official website of Silan

	工具
$\boldsymbol{\upsilon}$	Slamtec RoboStudio (最新版本: 1.7.5_rtm)
	RoboStudio RoboStudio 2.0 Windows
	RoboStudio 2.0 macOS


5-4 Official Slamtec RoboStudio

If you downloaded slamtec robostudio, After logging in to RS, click the "Robot" option and manually connect the robot with the right mouse button.

共享 查看						
> 此电脑 > 桌面 > robot_studio > robot_studio	• • Ŭ ∕ !	题索"robot_studio"		Connect to SL	AMWARE	X
名称 国 Qt5Qmld.dll	修改日期 2019/12/1 0:44	类型 应用程序扩展	大小 6,461 KB			
Qt5Quick.dll Qt5Quickd.dll Qt5Quickd.dll Qt5QuickWidgetsd.dll Qt5SerialPort.dll	2019/12/1 0:44 2019/12/1 0:44 2019/12/1 0:44 2019/12/1 0:44	应用程序扩展 应用程序扩展 应用程序扩展 应用程序扩展	2,367 KB 6,545 KB 127 KB 60 KB	IP	192.168.11.1	
Qt5SerialPortd.dll Qt5Widgets.dll Qt5Widgets.dll Qt5Widgets.dll Qt5Widgets.dll	2019/12/1 0:44 2019/12/1 0:44 2019/12/1 0:44	应用程序扩展 应用程序扩展 应用程序扩展	115 KB 4,386 KB 8,115 KB	Port	1445	
QtSXmLdll QtSXmLdll QtSXmLdll robostudiolex robostudiolk robostudio.pdb sobostudio.common.dll selay32.dll	2019/12/1 0:44 2019/12/1 0:44 2021/3/26 17:07 2021/3/26 17:05 2021/3/26 17:07 2021/3/26 16:55 2019/12/1 0:44 2021/3/26 16:05	应用程序扩展 应用程序扩展 LK文件 PDB Document 应用程序扩展 应用程序扩展 在用程序	148 KB 293 KB 10,351 KB 0 KB 136,603 KB 25 KB 265 KB 13 700 KB	network or let yo	connect to the rol our robot connec /IFI network first.	t to your
 update.exe update.exp update.ik update.lib update.pdb 	2021/3/13 16:10 2021/3/13 16:10 2021/3/13 16:10 2021/3/13 16:10 2021/3/13 16:10	应用程序 EXP 文件 ILK 文件 UB 文件 PDB Document	13,799 KB 6 KB 0 KB 10 KB 26,259 KB	Conne	ct Cancel	

5-5 Robo studio login screen

[step 3] if you downloaded slamtec robostudio, run "robostudio.exe", enter the interface of slamtec robostudio, enter the IP address and port, click "connect", and RS login succeeds.

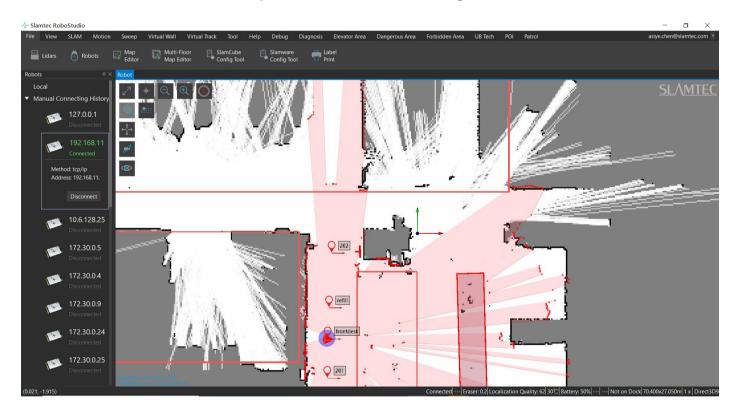

5-6 Robo studio interface


Note : The method of IP address query is to press the shortcut key, Windows+R, and enter the code ipconfig. Copy the IP of the default gateway and paste it into the IP address box of Slamtec RoboStudio. Click Connect to enter Slamtec RoboStudio.

C:\WINDOWS\system32\cmd.exe
Microsoft Windows [版本 10.0.18363.1734] (c) 2019 Microsoft Corporation。保留所有权利。
C:\Users\ena.liu>ipconfig
C:\WINDOWS\system32\cmd.exe
C:\Users\ena.liu>ipconfig
Windows IP 配置
无线局域网适配器 本地连接* 1:
媒体状态 媒体已断开连接 连接特定的 DNS 后缀 :
无线局域网适配器 本地连接* 2:
媒体状态 媒体已断开连接 连接特定的 DNS 后缀
无线局域网适配器 WLAN:
连接特定的 DNS 后缀 : fe80::78al:69ee:385e:c308%7
以太网适配器 蓝牙网络连接:
媒体状态 媒体已断开连接 连接特定的 DNS 后缀
C:\Users\ena.liu>

5-7 Method of obtaining an IP address

5.7 Map Building and Upload

Download and install the robot graphical control management tool Robot Studio from our official website <u>http://www.slamtec.com/cn/RoboStudio</u> to adjust and use Athena2.0, sign up account and log in. In the menu-toolbar area, click "File-Robot" in turn, and a docking page named Robot will appear on the left side of the workspace, as shown in the figure below. The user connects/disconnects the robot through this page.

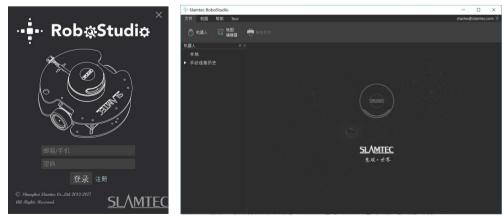

5-8 Rob Studio Robot page

Right-click the blank space of the robot list, click "Manually connect robots" in the pop-up menu, and the connect robot dialog box will pop up (as shown below). Enter the IP address and port number of the 30/48


SL\MTEC

Athena2.0 robot above and click the connect button to connect (This connection method is suitable for machines that have been assigned an IP address through the Web portal management backstage). When the computer has been connected to the SSID of the aforementioned Athena2.0 robot through a network adapter (SSID can be viewed on the label of the machine), enter the IP address 192.168.11.1 by default (note that your wireless network adapter IP address should be set to automatically obtain it using DHCP).



5-9 Rob Studio Robot connecting page


When finishing connecting, the work area will display the robot, map information, and status information. In the robot page, you will find that the name of the connected device turns green, and the status is "Connected", as shown in the figure below.

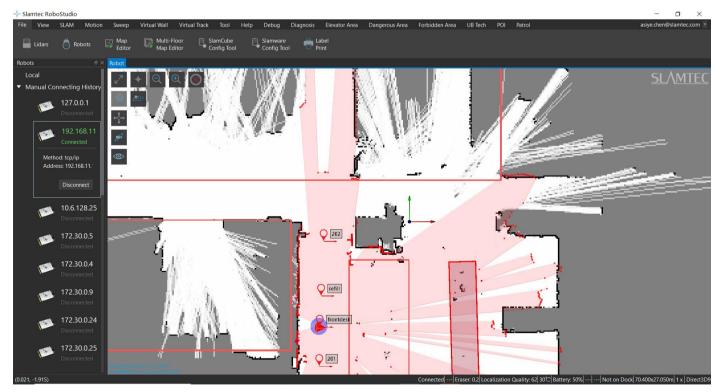

5-10 Rob Studio Robot connecting page

Left click the spot inside the map-building area, let Athena2.0 build the map. When finishing, please use the virtual wall function to isolate the places that need to be isolated. Then click "File-Map Editor" in turn, choose to save the file or upload to the firmware to save the map.

SL\MTEC

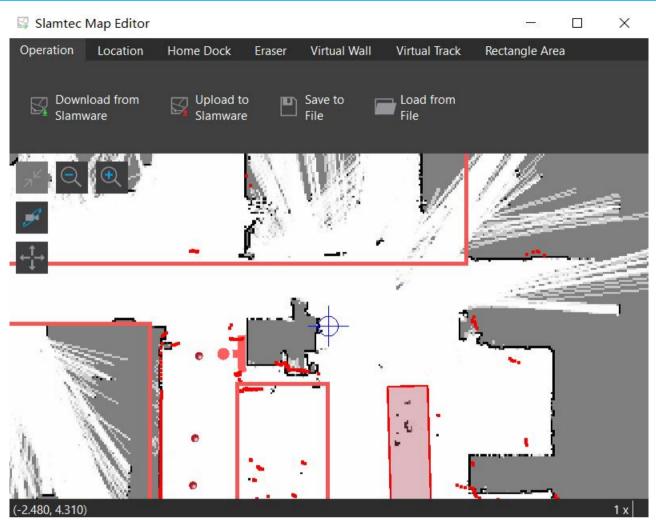

5-11 RoboStudio Robot Map Editor Window

There is a difference between the functions of restricted areas and virtual walls.

Restricted Area: When the Athena 2.0 is accidentally pushed into the restricted area, the Athena 2.0 machine can be automatically freed from the restricted area by giving a random point in RoboStudio.

Virtual Wall: When a human accidentally pushes Athena 2.0 into the virtual wall, the Athena 2.0 machine cannot automatically get out of the virtual wall and needs to be pushed out by a human at a random point in RoboStudio.

The Forbidden Area management function relies on the Slamware Forbidden Area plug-in. Slamware Forbidden Area is a public plug-in, the computer is connected to the Internet, after logging in RoboStudio, click Tools -> Plug-ins -> Shop -> All ->Slamware Forbidden Area-> Get -> Download -> Restart RoboStudio.

Public plug-in links:

https://wiki.slamtec.com/pages/viewpage.action?pageId=56164379)

<u>SL</u>\MTEC

北 插件管理			Х
▼ 本地 所有 调试 诊断	Slamware Config Tool		Slamware Forbidden Area 反本: 1.0.0 dev 20201228 作者: Slamtec 邮箱: support@slamtec.com
扩展 Display			描述: This plugin provides functions about forbidden area
 ▼ 商店 所有 调试 	Slamware Forbidden Area	获取	版本注释: 2020.08.17 Feature: New plugin for forbidden area management
扩展 Display	Slamware Frame Grabber		★ 依赖: 元 提供:
	Slamware POI		无
	Slamware Relocation		
兑换	Clamwara Cansor Man		

5-12 RoboStudio Public plug-in

After the plug-in runs normally, connect to the machine, you can see the "Ban zone" toolbar in the menu bar.

	ntec Rob	oStudio									
文件	视图	SLAM	动作	虚拟墙	虚拟轨道	工具	帮助	调试	诊断	Patrol	禁行区域
ゴ 济	ś加 [➡,选择	₫ 8	r 💼	清空						

5-13 RoboStudio No-go areas

5.8 Host Computer Completes Startup and Loading The Map

Below is a reference example of how to use the SDK to complete the startup and loading of a specific map on the host computer.



<u>SL/MTEC</u>

22	
22.	rpos::robot_platforms::objects::CompositeMapReader cmapreader;
23.	//map reader
24.	rpos::core::Pose Athena2.0_pose = rpos::core::Pose(rpos::core::Location(0, 0, 0));
25.	//the Athena2.0 pose in map(Athena2.0_pose should be the Athena2.0's real pose in new map)
26.	//using Athena2.0.getpose() to get the old Athena2.0 pose
27.	auto map = cmapreader.loadFile(map_path);
28.	//load map
29.	Athena2.0.setCompositeMap(*map, Athena2.0_pose);
30.	//set compositemap
31.	rpos::core::Pose home_pose = rpos::core::Pose(rpos::core::Location(0, 0, 0));
32.	//the home pose in map(home_pose should be the home's real pose in new map)
33.	//using Athena2.0.gethomepose() to get the old home pose
34.	Athena2.0.setHomePose(home_pose);
35.	//set home pose
36.	}
37.	catch (rpos::robot platforms::ConnectionFailException &e)
38.	{
39.	cout << "connect failed on " << e.what() << endl;
40.	}
41.	catch (rpos::system::detail::ExceptionBase &e)
42.	{
43.	cout << "failed on " << e.what() << endl;
44.	}
45.	,
46.	return 0;
47. }	
· · · · · · · · · · · · · · · · · · ·	

Further motion deployment details, please see the SDK instruction document

6. Adjusting Tools

6.1 RoboStudio

RoboStudio graphical tools are used to adjust and use Athena2.0, please download and install it from our official website: <u>http://www.slamtec.com/cn/RoboStudio</u>, and coming with manual to introduce those features.

6.2 Web Management Backstage

In the process of developing, adjusting and using SLAMWARE equipment, various operations can be performed on the equipment through the web management backstage, such as viewing basic information, updating the version, configuring WiFi,etc. (Default username: admin, default password: admin111)

Currently, web management backstage supports following functions:

- 1. Check basic information of the device
- 2. Restart the module
- 3. Update the firmware

Slamtec will regularly provide Athena2.0 firmware updates and upgrades. You can easily upgrade the firmware for Athena2.0 through the management backstage. Please obtain the latest firmware from sales or technical support personnel. The update process will last 5-10 minutes. The buzzer of Athena2.0 will continue to sound during the update, and Athena2.0 will automatically restart after the update. Before that, please make sure that Athena2.0 has sufficient power.

- 4. Configuring WIFI
- 5. Start the SLAMWARE Core diagnostic mode
- 6. Modify the administrator password

More details on usages please refer to:

https://wiki.slamtec.com/display/SD/SQ001+SLAMWARE+Web+Portal+Function+Overview


7. Developer Tools

7.1 Start Using

The Agent SDK of the Athena2.0 chassis is developed based on the C++ language to reduce user access costs and improve the robustness of the SDK. At the same time, it has strong compatibility and supports multiple languages such as Java, C++, C, and Kotlin. The following is a detailed introduction to the relevant examples and usage guidelines of the Agent SDK call based on the Athena2.0 chassis.

7.2 Inter-system Adjusting Framework

Robot App controls the robot's positioning, movement, and return to piles through communication; at the same time, Robot App sends instructions to the robot according to various business scenarios, and Robot Agent will provide data interfaces, task operation interfaces, and business services to Robot App.

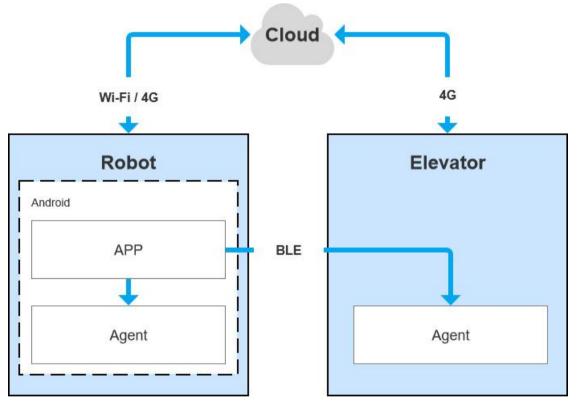

7-1 COMMUNICATION BETWEEN EACH SYSTEM OF ATHENA2.0

7.3 Instructions of Each System

7.3.1 Robot Agent

Robot Agent is a service program running on the Athena2.0 chassis, through which the cloud and the elevator control terminal communicate with the elevator control equipment. Inside the Robot system, the Robot Agent communicates with the Robot App, receives instructions from the Robot App to control the Robot, and sends the Robot status at the same time.

The core function of Robot Agent is:

✓ Communicate with the Robot Cloud, Robot APP, send the Robot status and receive instructions

7.3.2 Elevator Agent

<u>SL</u>\MTEC

Elevator Agent is a service program running on the Linux system of the elevator control main control box. The cloud and the robot end communicate with the elevator control equipment through it. Inside the elevator control system, the Elevator Agent communicates with the Elevator Controller through UDP, sending elevator control instructions and obtaining elevator status.

The core function of Elevator Agent is:

- ✓ Communicate with the Robot Cloud, Robot APP, send the elevator status and receive instructions of elevator control
- ✓ Communicate with the Elevator Controller, receive the elevator status and send instructions of elevator control

7.3.3 Robot Cloud

Robot Cloud is a set of services provided to realize remote management, scheduling, and control of robots. It runs in the cloud and communicates with the robot at one end and the elevator control equipment at the other end. Therefore, elevator control is part of the function. Robot Cloud communicates with the Elevator Agent running on the main control box of the elevator control through the MQTT protocol.

Its core functions include:

- \checkmark Send instructions, control the elevator to the designated floor
- \checkmark Send instructions, control the elevator to open the door
- \checkmark Send instructions, control the elevator to close the door
- ✓ Receive the up/down status of elevator
- ✓ Receive the current floor of the elevator

7.3.4 Robot App

Open-Source application – Restaurant Delivery App

The restaurant delivery app is a service program running on the robot. The application scene is a restaurant. It draws a map and loads it to the robot's local area through RoboStudio graphical tools. It is a universal application for human-computer interaction to achieve multi-point task delivery.

7.4 Demonstrations of Code

1. The following is an example of the Robot APP calling the Robot Agent interface to check the battery status

GET http://127.0.0.1:1448/api/core/system/v1/power/status

The format of the returned data is application/json

<u>SL</u><u>AMTEC</u>

```
interface AgentApi {
   /**
    * get方式调用 value: 接口地址
    * PowerStatus: 接口返回json格式对应的bean格式的data class的值
    */
   @GET("/core/system/vl/power/status")
   fun queryPowerStatus(): Call<PowerStatus>
}
/**
* batteryPercentage : 90 电池电量百分比, 0 ~ 100
* dockingStatus : 对桩状态
* isCharging : 是否正在充电...
*/
data class PowerStatus(
       val batteryPercentage: Int, val dockingStatus: String, val isCharging: Boolean,
       val isDCConnected: Boolean, val powerStage: String, val sleepMode: String
)
/**
* retrofit接口代理类
*/
object AgentServiceCreator {
   fun <T> create(serviceClass: Class<T>, timeout: Long): T =
           Retrofit.Builder().baseUrl("http://127.0.0.1:1448/api/")
                   .addConverterFactory(GsonConverterFactory.create()).client(
                           OkHttpClient.Builder().retryOnConnectionFailure(true)
                                   .connectTimeout(timeout, TimeUnit.SECONDS)
                                   .addInterceptor { chain ->
                                       val originalRequest = chain.request()
                                       val requestBuilder =
                                               originalRequest.newBuilder().addHeader("Connection", "close")
                                       chain.proceed(requestBuilder.build())
                                   }.build()
                   )
                   .build().create(serviceClass)
}
//查询电量, 返回值为powerstatus
val powerStatus = AgentServiceCreator.create(AgentApi::class.java, 1L).queryPowerStatus().await()
       Result.success(powerStatus)
```

2. The following is the Robot App calling the Robot Agent interface to make the robot move across floors

```
POST http://127.0.0.1:1448/api/core/motion/v1/actions
```

The request message format is application/json



7.5 Details Of Robot API



FUNCTION OF MODULES	API LIST		
	Get the Robot location		
	Set the Robot location		
	Get quality of location		
	Whether support locating		
	Start/Close locating		
Locate, map building-related functions	Whether start map building		
	Start/ pause map building		
	Get location of power station		
	Set location of power station		
	Get current map		
	Delete current map		
	Get all virtual line segment		
	Add virtual line segment		
	Adjust virtual line segment		
	Delete virtual line segment		
	Delete virtual line segment		
Mark map elements manually	Get all POI in current map		
	Add POI		
	Empty POI		
	Find POI according to ID		
	Modify POI		
	Delete POI		
	Get all supported actions		
	Get current action		
Motion control of the Robot	Stop current action		
	Create new action		
	Check action status		
Firmware Upgrade	Get firmware upgrade process		
	Get all custom installed apps		
Android application management	Install APP		
	Uninstall an APP		
	Move across floors		
	Go back across floors		
	Get all floor info		
Multi-floor map and POI management, taking	Get floor info of floor of the robot		
elevator, etc.	Setup info of floor of the robot		
	Get POI info		
	Upload map to the robot		
	Long-lasting save the map		
	Reload the map		
Delivery service-related interfaces	Get password of the action		

	Set password of the action			
	Get configuration info of the device			
	Get setup info related to the delivery			
	Check task info			
	Create task			
	Cancel all task			
	Cancel some task			
	Get current mission status			
	Stop/ continue current mission			
	Start picking up items			
	End picking up items			
	Get info of objects			
	NOTE: delivery business please inform			
	marketing department			
Restaurant delivery service-related interfaces	Get the current battery percentage			
	Get the health info of the device			
	Get POI info			
	Get password of the action			
	Make up new actions			
	Get current action			
	Terminate current action			
	Shut down or restart the robot			

MORE DETAILS OF API: <u>https://github.com/slamtec/Athena2.0SampleApp</u>

8. Introduction And Use Of Elevator Control

8.1 Introduction

Intelligent elevator control, independently developed by Shanghai SLAMTEC CO., Ltd, can provide accurate detection of elevator status, program control call elevators, control elevators, combined with Mercury II hotel robots, helping the robots to take and exit the elevators autonomously. Providing reliable solutions to multi-floor operation scenarios. In addition to working with hotel robots, the product can be used as an independent set of solutions. Through the API interface we provide, this product can also interact with other smart devices or products to meet the different customization needs of customers. At the same time, the product can also be seamlessly connected to the Athena2.0 chassis, to provide technical service support for more specific needs in other scenarios.

8.2 Features

8.2.1 Intelligence Elevator Control

The core function of this product is to help robots and other intelligent devices to control the elevator, such as calling the elevator, going to the designated floor, and controlling the elevator to open and close the door. This function greatly improves the business scenario of robots and breaks the previous limitation that robots can only work on the same floor.

8.2.2 Intelligence Status Detection

Through the built-in sensor and adaptive algorithm, this product can accurately detect the current floor, up and down status of the elevator, real-time to the millisecond level, with an accuracy of more than 96%, providing a very critical foundation so that the robot can enter and exit the elevator correctly and complete the work.

8.2.3 Elevator Diversity Adaption

The main control box has developed a variety of optimized filtering algorithms, so that this product is suitable for many different types of elevators, such as single-door elevators, double-door elevators, front and rear door elevators, etc. As it covers as many scenes as possible, this product can be used in most elevators at present. Users only need to simply calibrate and adjust through the APP provided after installing the equipment.

8.2.4 Multi-Level Network Adaption

Considering the limitations of the elevator network, how to ensure data interconnection and program interoperability is a very critical factor, and relatively it is also a difficult point. After continuous optimization iterations, we finally found a way to solve this problem. This product provides 4G, WIFI, BLE and other multi-level network communication methods to interact with robots and other smart devices to ensure the reliability of the communication link.

8.2.5 OTA Remote Upgrade

Support OTA remote upgrade of software and firmware, and batch deployment. At the same time, it provides support for VPN, which can remotely log in to the Linux system of this product for upgrades and other operations. Through the OTA function, real-time updates, upgrades and optimization can be done.

8.2.6 Interface Support

The intelligent elevator control provides a consistent API interface to the outside world, supports Bluetooth, MQTT, and HTTP communication protocols. Customers can control and interact with the elevator by writing their own program code. At the same time, it supports secondary development to meet the different customization needs of customers.

8.2.7 Swipe To Bypass

For some elevators that require a swipe card to ride, this product can also be easily supported. Just install the equipment we specify when installing the device, and then turn on the swipe card to bypass it in the APP. In this way, even if there is a card reader, it can be easily bypassed and freely enter and exit the elevator.

8.2.8 Unified Management

The cloud platform provided by SLAMTEC can perform real-time monitoring of the status of all deployed products, batch upgrades, and further data mining through online management, information statistics, equipment monitoring, etc., to provide exclusive accurate data models for hotels or commercial buildings, to guide them to improve their overall operational capabilities and service quality.

To know more about the detailed solution of elevator control, obtain it from the marketing department. Elevator control user manual->>

Note: This intelligent elevator control can only be used in China.For foreign customers, it needs R & D evaluation and customization.

9. Special Note

9.1 Charge point deployment


Precautions for the selection of charging pile location:

(1) The charging pile should be placed on the wall with a space of more than 0.35 meters on both sides and more than 1 meter in front;

(2) The charging pile shall be close to the wall, and shall not be placed in the mirror wall, back hollowed out and other areas, etc;

(3) The position of the charging pile must not be placed on soft ground such as carpet, otherwise it will cause height difference and cannot be charged;

(4) The position of the charging pile in the scene needs to be marked to prevent incorrect recovery after moving.

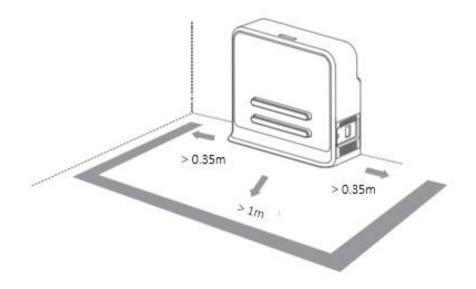

9.2 Restricted usage scenarios

Please avoid using Athena2.0 chassis in the following scenarios to avoid chassis failure or damage.

(1) Overrun/heavy transportation

Do not put in items that exceed the maximum weighing parameter value to avoid affecting the normal use of Athena2.0. Please refer to the information in the product parameter table for the maximum load-bearing parameter value.

(2) Sill height

Please ensure that there are no obstacles more than 20mm in front of Athena2.0, and the maximum height of Athena2.0 over the sill is 20mm. During Athena2.0 driving, please try to avoid passing through uneven ground or other environments with large height.

(3) Man -made impact

Do not forcefully push or hit the Athena2.0 body when Athena2.0 is in normal use.

(4) Temperature / humidity

Do not place Athena2.0 in places with high temperature, high humidity or water stains.

(5) Ground obstacles

Please ensure that the ground is clean and free of wireless obstacles and sundries.

(6) Outdoor

Do not use the machine outdoors.

(7) It is limited to safe use below 2000m above sea level.

9.3 Faults that cannot be handled temporarily

When the machine encounters a fault that cannot be handled temporarily, you can try the following operations:

(1)Please press the brake button;

(2) Push the machine back to the charging pile;

(3) The machine can be forced to switch on and off in any state after power- on.

*Use only in emergency situations.

9.4 Notes

Notes for storage:

(1) Since the machine contains battery, it should be stored in a cool and dry environment;

(2)For long-term storage (more than 3 months), it is recommended to put it in a dry environment with room temperature of 10-25 $^{\circ}$ C and no corrosive gas;

(3) Athena2.0 shall be charged every 6 months during long-term storage to ensure that the voltage of each battery unit is in the range of 3.6v-3.9v.

Packing notes:

(1)The packaging material must have a certain degree of strength and toughness, and can withstand slight vibration, extrusion, friction and collision during transportation;

(2)There should be padding around the package, which can play a good cushioning role;

Notes for transportation, loading and unloading:

(1)Please handle with care to prevent falling, collision, dragging and inversion;

(2)Stacking needs to be built firmly, compactly, stably and neatly;

Other notes:

(1)Do not treat Athena2.0 violently (such as kicking, pushing, pulling);

(2)Do not spill liquid on the machine;

(3)Do not use the automatic recharge function on the soft carpet with a subsidence of more than 2cm;

(4)It is recommended to start the equipment on the charging base;

(5)Do not change the inside of the machine without authorization;

(6)In environments with many high-transmittance materials, please use auxiliary protection functions, such as virtual walls.

10. Maintenance

1. General maintenance

(1) Radar cleaning: When the machine is shut down and not working, check the surroundings of the radar to ensure that there are no obstructions.

(2) Universal wheel cleaning: When the machine is shut down and not working, gently lift the chassis, wipe the universal wheel with a soft dry cloth, and remove the surrounding foreign matters.

(3) Depth camera lens cleaning: Please wipe the lenses of the depth cameras with a soft dry cloth when the machine is powered off.

(4) Cleaning the charging pile: Please wipe the charging pile and charging electrode with a soft dry cloth when the power is off.

(5) Collision bar cleaning: Please wipe the collision bar with a soft dry cloth when the power is off, and ensure that there are no wires, paper scraps and other foreign objects stuck on the anti-collision bar.

2. Maintenance cycle

For the maintenance of the main engine, it mainly includes depth camera lens inspection, collision bar inspection, clearance inspection around the radar, foreign matter inspection around the driving wheel and universal wheel, charging pile inspection, etc. The time interval of the maintenance cycle can be appropriately adjusted according to the environment, frequency, intensity and temperature of the machine.

Athena2.0 maintenance schedule		Time interval			
NO	Name	Maintenance level	Year	Month	Week
1	Depth camera lens	Clean			1 time
2	Collision bar	Clean			1 time
3	Around the radar	clearance		1 time	
4	Universal wheel	Clean			1 time
5	Driving wheel	Clean			1 time
6	Charging pile	Clean		1 time	
7	Machine body	Overhaul	1 time		

10-1 Athena2.0 maintenance schedule

11. Common faults and troubleshooting

When an abnormality occurs during Athena2.0 operation, please refer to the following table or page tips to solve the problem:

NO	Fault prompt	Solutions		
1	Collision bar abnormal	Please check whether the collision bar is jammed, and tap the anti-collision bar several times to return the anti-collision bar to its position.		
2	Athena2.0 battery low	Please press the brake release button and push the machine back to the charging point to charge.		
3	The charging point cannot be charged	Please check whether the power cord plug of the charging point is inserted into the socket and whether the indicator light of the charging point is on normally.		
4	Unable to power on	Please check whether the charging point is connected to the power supply. Aft the charging point and Athena2.0 are connected normally, if it cannot be solve please contact the after-sales service department.		
5	Athena2.0 cannot be charged on the pile	Please try again on the charging pile. If you cannot solve it, please contact after- sales service.		
6	Unable to go back to the charging point	 Please confirm whether the position of the charging point has been moved. If the position has been moved, please contact the after-sales department. Please confirm whether there is a slope at the position of the charging point. If there is a slope, please contact the after-sales department. Please push Athena2.0 back to the charging point and try to restart Athena2.0. 		
7	Unable to get in / out of the elevator	 Please confirm whether there are obstacles in the elevator. Please confirm the internet signal near the elevator. Please push Athena2.0 back to the charging point and try to restart Athena2.0. 		
8	Universal wheels rotate intermittently	Please check whether there are any foreign objects such as threads, cards, etc. around the universal wheels and the driving wheels. If there are foreign objects, please clean them.		
9	Machine can't walk	Please check whether the drive cable is connected normally. If it cannot be solved, please contact the after-sales service.		
10	The light strip does not light up	Please check whether the connecting wire of the light strip is connected normally. If it cannot be solved, please contact the after-sales service.		

12. Certificate

Company name: Shanghai Slamtec Co., Ltd

Company Address: Unit 01, 2nd Floor, Building E, Shengyin Building, No.666 Shengxia Road, China (Shanghai) Pilot Free Trade Zone.

Contact information: (+86) 021 68581569